

WORK^{PRO} 



ER 226



Equipson, S.A.
www.equipson.es
support@equipson.es

CE

WORK

All rights reserved.

User Manual / Instrucciones de Usuario



ER 226 MEGAPHONE



ER 226 MEGAFONO



Mouth (Cover for batteries replacement) Remove this cover when replacing batteries.

Microphone Mouthpiece. Speak through this microphone mouthpiece bringing your lips close to it.

Sound Volume Control. The volume of amplified sound increases when this control is turned clockwise.

Whistle/siren

Press-to-talk power Press this switch for announcing.

Grip.

Carrying Strap.

Specifications:

Power Source: 6, "AA"UM-3 Battery(not supplied).

Battery life: Approx 8 hours (talk)
Approx 40 minutes (Continuous Signaling)

Audible Range: 0.5km-0.7km (depending on operating conditions).

Dimensions & Weight: Mouth diameter 150mm
Length 237mm Weight 620g.

Operating Instructions

When Making Announcement:

1. Hold the megaphone at the grip and press the trigger switch with your index finger.
2. Position the Megaphone towards the object, and speak through the microphone mouthpiece. Bring the microphone close to your lips and speak with a clear, normal voice.
3. Turn the sound volume control at the back of the grip, and adjust the sound level to optimum without causing howling.

Micrófono. Retire la tapa para reemplazar las baterías.

Hable a través del microfono.

Control de Volumen.

Sirena

Presione para hablar.

EESPECIFICACIONES:

Alimentacion	6 Pilas tipo AA (UM-3) S006P/9V
Duracion de las pilas	Aproximadamente 8 horas (habla). Aproximadamente 40 minutos (señalización continua).
Rango de audicion	300M-350M
Dimensiones y Peso	150mm de diametro - Longitud 237mm - Peso 620g

CE

Battery Loading

- 1 Remove the battery case and put in six type AA (UM-3) batteries with correct polarity
2. After putting the batteries in, insert the battery case into the battery compartment of the megaphone with correct polarity.
- 3 Refit the battery cover

Cautios

1. Be sure to put the batteries in with correct polarity
2. When the megaphone is not for use for a long period remove the batteries.
3. Drained batteries do not give sufficient sound volume. Replace batteries at regular intervals.

Cambio de baterías:

Empuje y presione para aflojar la tapa

Retire el porta-baterías

Coloque las baterías

Instrucciones de Uso: Al hacer una alocución, presione la tecla indicada en el dibujo. Dirija el megáfono hacia el lugar que desea hablar y hágalo a través del microfono. Ajuste el control de volumen para que el sonido sea optimo.