



COMPACT 400 USB

Rev. 16.05.02

User Manual / Instrucciones de Usuario

IMPORTANT SAFETY SYMBOLS



The symbol is used to indicate that some hazardous live terminals are involved within this apparatus, even under the normal operating conditions, which may be sufficient to constitute the risk of electric shock or death.



The symbol is used in the service documentation to indicate that specific component shall be replaced only by the component specified in that documentation for safety reasons.



Protective grounding terminal



Alternating current/voltage



Hazardous live terminal

ON: Denotes the apparatus is turned on

OFF: Denotes the apparatus is turned off.

WARNING: Describes precautions that should be observed to prevent the danger of injury or death to the operator.

CAUTION: Describes precautions that should be observed to prevent danger of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions.**

- **Keep these instructions.**

- **Heed all warning.**

- **Follow all instructions.**

- **Water & Moisture**

The apparatus should be protected from moisture and rain, can not used near water, for example: near bathtub, kitchen sink or a swimming pool, etc.

- **Heat**

The apparatus should be located away from the heat source such as radiators, stoves or other appliances that produce heat.

- **Ventilation**

Do not block areas of ventilation opening. Failure to do could result in fire. Always install accordance with the manufacturer's instructions.

- **Object and Liquid Entry**

Objects do not fall into and liquids are not spilled into the inside of the apparatus for safety.

- **Power Cord and Plug**

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety.

If the provided plug does not fit into your outlet, refer to electrician for replacement.

- **Power Supply**

The apparatus should be connected to the power supply only of the type as marked on the apparatus or described in the manual. Failure to do could result in damage to the product and possibly the user.

Unplug this apparatus during lightning storms or when unused for long periods of time.

- **Fuse**

To prevent the risk of fire and damaging the unit, please use only of the recommended fuse type as described in the manual. Before replacing the fuse, make sure the unit turned off and disconnected from the AC outlet.

- **Electrical Connection**

Improper electrical wiring may invalidate the product warranty.

- **Cleaning**

Clean only with a dry cloth. Do not use any solvents such as benzol or alcohol.

- **Servicing**

Do not implement any servicing other than those means described in the manual. Refer all servicing to qualified service personnel only.

 
- **Only use accessories/attachments or parts recommended by the manufacturer.**

- **Warning**

Please remember the high sound pressure do not only temporarily damage your sense of hearing, but can also cause permanent damage. Be careful to select a suitable volume.

Features

- Portable P.A.system with 2 loudspeakers integrating 2x woofer de 6.5"and 25 mm.Twt
- Class-D amplifier, 2x100W
- 2 MIC/LINE inputs +2 stereo inputs
- 2 Tone control- Phantom power
- USB/SD/Bluetooth interface - Inner effect
- Accessories: 2 dynamic microphones+cables +loudspeakers cables
- Remote control

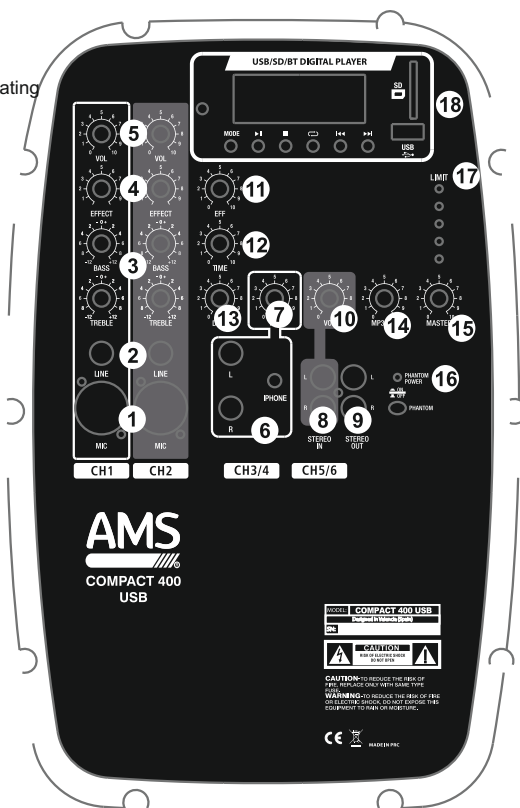

Channel function instruction

Channel 1-2

1. Mic in (XLR)

This input is used to plug in microphone cable to get signal from microphone

2. Line in (1/4" jack)

This input is used to plug in signal cable to get signal from CD player or other devices

3. EQ

Treble : This knob is used to adjust high frequency

Bass : This knob is used to adjust low frequency

4. EFF

This knob is used to adjust the digital effect volume of the channel

5. Volume

This knob is used adjust the output volume of the channel

Channel 3-4 (RCA & 3.5mm jack)

6. These input is used to get signal from CD player or other devices by RCA cables or to get signal from mobile phone by 3.5mm jack cables

7. Volume

This knob is used to control the output volume of channel 3-4

8. Stereo in

This input is used to get signal from CD player or other devices by RCA cables

9. Stereo out

This input is used to output signal to another amplifier

10. Volume

This knob is used to control the output volume of stereo in

Master control instruction

11.EFF

This knob is used to control the digital effect volume of the whole product

12. Time

This knob is used to adjust the digital effect time

13. Depth

This knob is used to adjust the digital effect depth

14. MP3 Vol

This knob is used to control the output volume of the mp3 player

15. Master

This knob is used to control the total output volume of the whole product

 
16. Phantom power switch

Press down to provide +48 V phantom power supply to condenser microphone

17. Limit

These indicators will show the strength of the signal of the whole product

18. MP3 player instruction

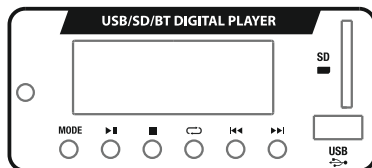

(1) .USB/SD Connector

A USB/SD Connector for auxiliary signal input and Mp3 player.

(2) .Play/Pause Button

Press to boot or pause playback of files on USB flash drives / SD / MMC.

If you are in FM Radio mode, pressing the seek button to search stations and store them in memory

(3) .Stop Button

This button stops playback of USB drives / SD/ MMC/BLUETOOTH

(4) . MODE

Press this button shortly to choose BLUETOOTH /USB/SD status for signal.

 
Bluetooth name on the phone : ZY-BT1

(5) . Reverse Button

Press in playback mode USB Drive/SD/MMC to return to the previous song, if you press and hold back the song playing.

(6) . Forward Button

Press in the playback mode USB Drive/SD/MMC to advance to the next song, if you hold down the button advances the currently playing song.

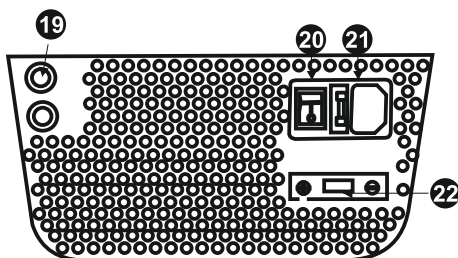

Back panel instruction

19.Speaker Output(2x1/4"jack)

These two inputs are used to connect to 2x6.5" passive speaker box

20.AC socket

This input is used to plug power cord to get electric power supply

21.Fuse Holder

Please replace the fuse with correct specification

22.Voltage selector

Please unscrew the plastic cover to choose the correct volage you want.And ,please screw the plastic cover after you finish choosing the voltage

SIMBOLOS RELATIVOS A LA SEGURIDAD

WARNING:



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR HUMIDITY. DO NOT REMOVE COVER. THIS PRODUCT IS NOT INTENDED FOR USE OTHER THAN STATED. ENSURE THAT THE MAIN VOLTAGE SOURCE MATCHES THE VOLTAGE RATING.

EXPLICACION DE LOS SIMBOLOS GRAFICOS



Este símbolo, cuando aparece, le alerta de la presencia de un voltaje peligroso y no aislado dentro del producto. este voltaje puede ser suficiente para constituir un riesgo de descarga eléctrica.



Este símbolo, cuando se use, le alerta de una instrucción de funcionamiento o seguridad importante. Por favor, léala



Alimentación AC (Corriente Alterna)



Terminal cargado (peligro)

ON: Denota que el producto está encendido.

OFF: Denota que el producto está apagado.

WARNING

Describe precauciones que deben ser observadas para prevenir la posibilidad de muerte o daños al usuario.

CAUTION

Describe precauciones que deben ser observadas para prevenir daños en el producto.

WARNING

Alimentación

Asegúrese que la toma de alimentación (Toma AC) es igual a la marcada por el producto. Si no es así el producto podría dañarse e incluso dañar al usuario.

Desconecte el producto antes de una tormenta eléctrica y cuando vaya a dejar de usarlo durante periodos largos de tiempo para reducir el riesgo de descargas eléctricas.

Conexiones Externas

Utilice siempre el cable de alimentación aislado suministrado. En caso de no hacerlo, puede incurrir en un riesgo de descarga eléctrica o fuego. En caso de duda, consulte a un electricista especializado.

No retire ninguna cubierta

Dentro del producto hay zonas con tensiones altas presentes. Para reducir el riesgo de descargas eléctricas no quite las tapas a menos que el cable AC esté retirado.

Las tapas sólo deben ser retiradas por personal cualificado.

No hay elementos de control para el usuario en el interior.

Fusible

Para prevenir fuego y daño en el producto, uso sólo el tipo de fusible recomendado como indica el manual. No cortocircuite el portafusible. Antes de sustituirlo, asegúrese que el producto está apagado y desconéctelo de la toma AC..

Protección de masa

Antes de encender la unidad, asegúrese que está conectado a masa. Esto previene el riesgo de descarga eléctrica.

Nunca corte interna o externamente el cable de masa. Además nunca desconecte el cable del terminal de masa.

 
Condiciones de Funcionamiento

Instale la unidad de acuerdo a la instrucciones del fabricante.

para evitar el riesgo de descargas eléctricas y daños, no someta al producto a ningún líquido, lluvia o humedad. No use el producto cerca del agua. No instale este producto bajo la luz solar directa. No bloquee las salidas de ventilación.

Características

- Sistema portátil amplificado compuesto por 2 cajas acústicas con woofer de 6.5" y Twt de 25 mm.
- Amplificador clase D de 2x100W
- 2 entrada MIC/LINE +2 estéreo
- 2 controles de tono- Alimentación phantom
- Interfaz USB/SD/Bluetooth - Efecto interno
- Accesorios: 2 micrófonos dinámicos+cables +cables altavoz
- Control remoto

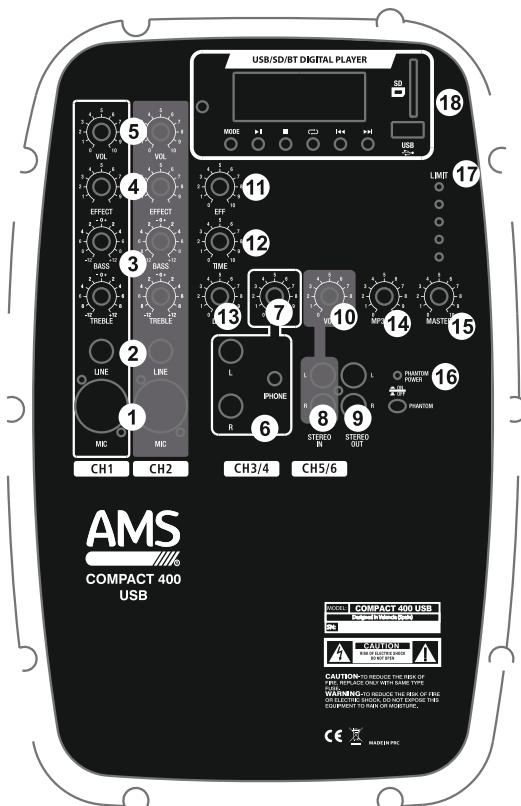

Canales 1-2

1. MIC in (XLR)

Esta entrada se utiliza para conectar un micrófono dinámico con cable.

2. LINE in (Jack 1/4")

Esta entrada se utiliza para conectar un dispositivo de nivel Line.

3. EQ

Treble: Permite ajustar las frecuencias agudas

Bass: Permite ajustar las frecuencias graves

4. EFF

Se usa para ajustar el volumen del efecto interno

5. Volume

Permite controlar el volumen de salida del canal

6. Canales 3-4

Estas entradas se usan para conectar un reproductor CD o similar tanto en los conectores RCA o minijack.

7. Volume

Permite controlar el volumen de salida del canal

8. Stereo in

Estas entradas se usan para conectar un reproductor CD o similar tanto en los conectores RCA o minijack.

9. Stereo out

Se utiliza para enviar la señal de previo a otro dispositivo similar

10. Volume

Permite controlar el volumen de salida de la entrada estéreo

Sección Master

11. EFF

Se utiliza para controlar el volumen del efecto en la salida general

12. Time

Ajusta el tiempo del efecto interno

13. Depth

Ajusta la profundidad del efecto interno

14. MP3 vol

Ajusta el volumen de la interfaz USB/SD/BT

15. Master

Se usa para controlar el volumen general de la unidad

 
16. Phantom power switch

Presione para proporcionar +48V para micrófono de condensador

17. Limit

Estos indicadores muestran el nivel de la señal

18. Interfaz MP3

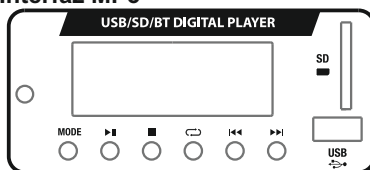

Conector USB/SD

Este conector permite utilizar un dispositivo externo USB o SD para ejecutar ficheros de audio

Play/Pause

Presione para conmutar entre play y pausar la ejecución del fichero

Stop

Pulse para detener la ejecución de un fichero de audio

MODE

 
Presione brevemente para conmutar BLUETOOTH/USB/SD. En Bluetooth, el dispositivo vendrá marcado com ZY-BT1

Reverse

Pulse para volver a la pista anterior a la que se está ejecutando

Forward

Pulse para ir a la pista siguiente a la que se está ejecutando

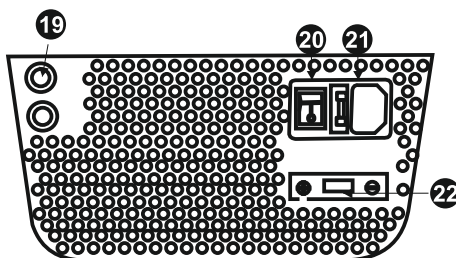

Panel Trasero

19. Salida de altavoz

Estas salidas se usan para conectar las 2 cajas acústicas incluidas

20. Toma AC

Conecte un cable para alimentar la unidad

21. Portafusible

En caso de que se funda el fusible, sustitúyalo por otro del mismo tipo y valor

22. Selector de tensión

Antes de conectar la unidad, verifique que la tensión marcada es la misma que la existente en la toma de conexión.

AUDIOMUSIC

Avda. El Saler, 6 - Pol. Ind. L´Alteró, 46460 - Silla (Valencia) Spain

Tel. +34 963 124 088 Fax + 34 963 219 645

www.audiomusic.es audiomusic@audiomusic.es