




FLASH BAR 176

Rev. 16.04.01

User Manual / Instrucciones de Usuario


FLASH BAR 176

 Our DMX indoor **FLASH BAR 176** (8 sections) offers many possibilities to achieve the effects which you want. The chasing effects are very good. It is designed for the stages, disco, night clubs etc, even the building halls.



1. Weight: 3kg
2. Dimensions: 1000*70*90 mm
3. Power input: AC100-220V/50-60Hz
4. Consumption: 180W
5. LEDs: 352 pcs, 0.5W, White color
6. Beam angle: 120 degree
7. 3 pin female XLR socket and 3 pin male XLR socket
8. Built-in microphone
9. Black aluminum material
10. Working place: indoor, temperature:-20°C~45°C ,humidity:0%-90%
11. LED display for easier operation
12. Built-in programs, stand alone, DMX mode, music active, static color
13. 3 selectable DMX modes: 2.4.9 DMX channels mode

 LED DISPLAY FUNCTIONS

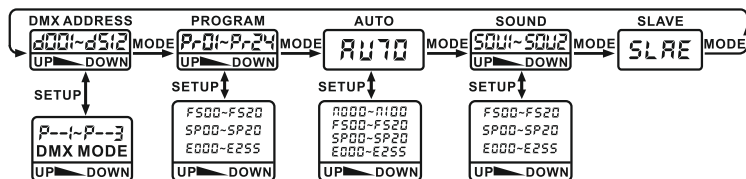

P--1 ⇒ 2 DMX channels
P--2 ⇒ 4 DMX channels
P--3 ⇒ 9 DMX channels

F500-F520 ⇒ Strobe speed
SP00-SP20 ⇒ Effect speed
E000-E255 ⇒ Dimmer

R000-R100 ⇒ Loop frequency

1. Press "mode" to choose working mode
2. Press "setup" to set parameter
3. Press "up" or "down" to change number value

DMX value as follows:

DMX mode (P--1)

CH1	CH2
WHITE	0=OFF
0-255 dimming	1-255 flash

DMX mode (P--2)


CH1	CH2	CH3						CH4
dimmer		NO.	DMX value	FUNCTION	NO.	DMX value	FUNCTION	
0-255 Light flash 0=OFF	1-255 flash 0=OFF	1	0	OFF	15	130-139	PROGRAM15	SPEED 0-255
		2	1-9	PROGRAM01	16	140-149	PROGRAM16	
		3	10-19	PROGRAM02	17	150-159	PROGRAM17	
		4	20-29	PROGRAM03	18	160-169	PROGRAM18	
		5	30-39	PROGRAM04	19	170-179	PROGRAM19	
		6	40-49	PROGRAM05	20	180-189	PROGRAM20	
		7	50-59	PROGRAM06	21	190-199	PROGRAM21	
		8	60-69	PROGRAM07	22	200-209	PROGRAM22	
		9	70-79	PROGRAM08	23	210-219	PROGRAM23	
		10	80-89	PROGRAM09	24	220-229	PROGRAM24	
		11	90-99	PROGRAM10	25	230-239	PROGRAM25	
		12	100-109	PROGRAM12	26	240-249	Sound Mode 1	
		13	110-119	PROGRAM13	27	250-255	Sound Mode 2	
		14	120-129	PROGRAM14				

DMX mode (P--3)

CH1	CH2	CH3	CH4	CH5
flash	1	2	3	4
1-255 Light 0=OFF	0-255 dimming	0-255 dimming	0-255 dimming	0-255 dimming
CH6	CH7	CH8	CH9	
5	6	7	8	
0-255 dimming	0-255 dimming	0-255 dimming	0-255 dimming	


FLASH BAR 176

 Nuestra barra LED para interior **FLASH BAR 176** (8 secciones) ofrece muchas posibilidades para conseguir el efecto deseado. La rotación de strob y chases es muy fluida. Diseñado para escenarios, discotecas, salas de fiesta, etc.



1. Peso: 3kg
2. Dimensiones: 1000*70*90 mm
3. Alimentación: AC100-220V/50-60Hz
4. Consumo: 180W
5. LEDs: 352 LEDs 0.5W cada uno, color blanco
6. Ángulo del haz: 120 degree
7. Conector XLR3 macho y XLR 3 hembra
8. Micrófono integrado
9. Acabado en aluminio, color negro
10. Ambiente de uso: interior, temperatura:-20°C~45°C , humedad:0%-90%
11. Display LED para selección de funciones
12. Programas incorporados, stand alone, modo DMX, activo por audio, colores estáticos
13. 3 modos DMX seleccionables: 2.4.9 canales DMX

 FUNCIONES EN PANTALLA

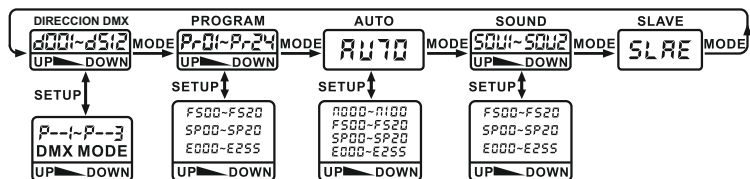

P001 → 2 canales DMX
P002 → 4 canales DMX
P003 → 9 canales DMX

F500-F520 → Velocidad stroboscópica
SP00-SP20 → Velocidad efecto
E000-E255 → Dimmer

A001-A002 → Frecuencia del loop

1. Presione "mode" para elegir el modo de trabajo
2. Presione "setup" para configurar el parámetro
3. Presione "up" o "down" para cambiar el valor numérico

Modos DMX

DMX modo (P--1)

CH1	CH2
BLANCO	0=OFF
0-255 dimmer	1-255 flash

DMX modo (P--2)

CH1	CH2	CH3						CH4
dimmer		NO.	Valor DMX	FUNCION	NO.	Valor DMX	FUNCION	
0-255 Light 0=OFF	1-255 flash 0=OFF	1	0	OFF	15	130-139	PROGRAM15	VELOCIDAD 0-255
		2	1-9	PROGRAM01	16	140-149	PROGRAM16	
		3	10-19	PROGRAM02	17	150-159	PROGRAM17	
		4	20-29	PROGRAM03	18	160-169	PROGRAM18	
		5	30-39	PROGRAM04	19	170-179	PROGRAM19	
		6	40-49	PROGRAM05	20	180-189	PROGRAM20	
		7	50-59	PROGRAM06	21	190-199	PROGRAM21	
		8	60-69	PROGRAM07	22	200-209	PROGRAM22	
		9	70-79	PROGRAM08	23	210-219	PROGRAM23	
		10	80-89	PROGRAM09	24	220-229	PROGRAM24	
		11	90-99	PROGRAM10	25	230-239	PROGRAM25	
		12	100-109	PROGRAM12	26	240-249	Modo Audio 1	
		13	110-119	PROGRAM13	27	250-255	Modo Audio 2	
		14	120-129	PROGRAM14				

DMX modo (P--3)

CH1	CH2	CH3	CH4	CH5
flash	1	2	3	4
1-255 Light 0=OFF	0-255 dimmer	0-255 dimmer	0-255 dimmer	0-255 dimmer
CH6	CH7	CH8	CH9	
5	6	7	8	
0-255 dimmer	0-255 dimmer	0-255 dimmer	0-255 dimmer	



EQUIPSON, S.A.

Avda. El Saler, 14 - Pol. Ind. L'Alteró, 46460 - Silla (Valencia) Spain

Tel. +34 96 121 63 01 Fax + 34 96 120 02 42

www.equipson.es support@equipson.es