



PA 200

RS 485 COMMANDS

PINOUT BASE RJ45

T568B		
PIN 1	White/Orange	GND
PIN 2	Orange	GND
PIN 3	White/Green	DATA -
PIN 4	Blue	DATA +
PIN 5	White/Blue	NF
PIN 6	Green	NF
PIN 7	White/Brown	NF
PIN 8	Brown	NF

PORT CONFIGURATION

BaudRate	38400
Parity	None
Data Size	8

OPEN PORT

	DATA HEAD	PARITY bit	Channel Number	ID Number	Empty	Parameter Range	Empty	Empty	Empty	Data Tail
Start communication	FE	AA	AA	AA	AA	55	55	55	55	FF

NOTE 1-

Before controlling the device, it is necessary to open the communication port sending this command

VOLUME ADJUSTMENT

	DATA HEAD	PARITY bit	Channel Number	ID Number	Empty	Parameter Range	Empty	Empty	Empty	Data Tail
To adjust the channel volume	FE	0D	CH (01 or 02)	01	00	VL (00 to 76)	00	00	00	FF

To adjust the volume to max in channel 1

FE 0D 01 01 00 76 00 00 00 FF

To adjust the volume to min in channel 2

FE 0D 02 01 00 00 00 00 00 FF