


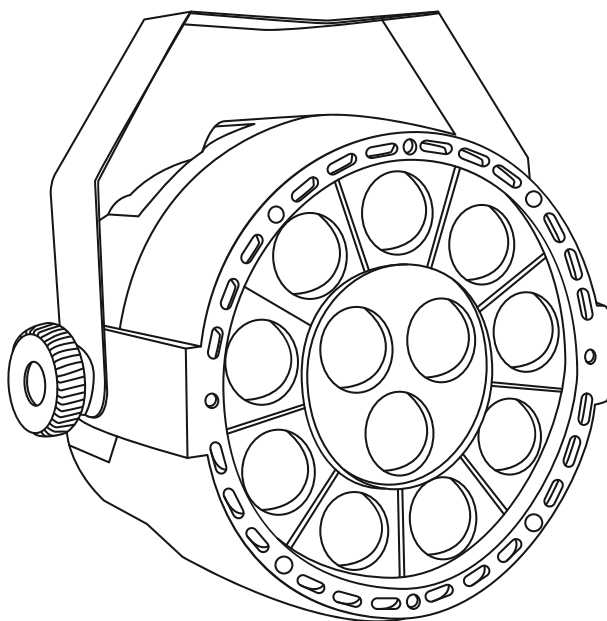

PAR 36 BU



User Manual / Instrucciones de Usuario

Rev. 16.04.01

Safety Instructions



WARNING

Please read the instructions carefully which includes important information about the installation, operation and maintenance.

Please keep this User Manual for future consultation. If you sell the fixture to another user, be sure that they also receive this instruction booklet.

Unpack and check carefully there is no transportation damage before using the fixture. It's important to ground the yellow/green conductor to earth in order to avoid electric shock.

Disconnect main power before servicing and maintenance.

Maximum ambient temperature is $T_a : 40^{\circ}\text{C}$. Don't operate it where the temperature is higher than this.

In the event of serious operating problem, stop using the fixture immediately. Never try to repair the fixture by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.

Do not connect the device to any dimmer pack.

Do not touch any wire during operation and there might be a hazard of electric shock.

To prevent or reduce the risk of electrical shock or fire, do not expose the fixture to rain or moisture.

The housing must be replaced if they are visibly damaged.

Do not look directly at the LED light beam while the fixture is on.

There are no user serviceable parts inside the fixture. Do not open the housing or attempt any repairs by yourself. In the unlikely event your fixture may require service, please contact your nearest dealer.

Due to the magnifying type lens, please keep the lens out of contact with direct sunlight. Direct sunlight can cause heat to build up inside of the unit, which will seriously damage unit.

DMX channels

CH	VALUE	FUNCTION
CH1	0-10	CH4-CH7 Manual Control
	11-50	A1 Choose Color
	51-100	A2 Jump Change
	101-150	A3 Gradual Change
	151-200	A4 Sound Control
	201-255	A5 Strobe
CH2	0-39	7 Color Recycle 01
	40-59	Red 02
	60-79	Green 03
	80-99	Blue 04
	100-119	Yellow 05
	120-139	Cyan 06
	140-159	Purple 07
	160-179	RG 08
	180-199	RB 09
	200-219	GB 10
	220-255	RGB 11
CH3	0-255	Speed adjust (Combine CH1)
CH4	0-255	Master Dimmer (Combine CH5, 6, 7)
CH5	0-255	0-100% Red Dimmer
CH6	0-255	0-100% Green Dimmer
CH7	0-255	0-100% Blue Dimmer

Specifications

Main supply	AC 220-240V, 50/60 Hz
Consumption	40W
LEDs	12 x3W RGB (3in-1)
Functions	DMX, Auto-run, Sound, Master/slave
DMX channels	7 channels
Dimensions	120 x 120 x 90 mm
Weight	600 g

1. Instrucciones de seguridad



AVISO

Por favor, lea las instrucciones cuidadosamente, incluyen información importante sobre la instalación, manejo y mantenimiento de la unidad

Por favor, conserve este manual de uso para futuras referencias junto con la unidad.

Desembale y compruebe cuidadosamente que no se han producido daños durante el transporte antes de usar la unidad.

Es importante conectar el cable amarillo/verde a tierra con el fin de prevenir descargas eléctricas.

Desconecte la alimentación antes de repararlo o limpiarlo.

La temperatura ambiente máxima es T_a : 40°C. No opere la unidad en lugares con una temperatura superior.

En caso de serios problemas de uso, deje de usar la unidad de inmediato. Nunca trate de repararla por sí mismo. Las reparaciones llevadas a cabo por personal no autorizado, pueden ocasionar daños o mal funcionamiento. Por favor, contacte con su distribuidor para obtener asistencia técnica. Use siempre los repuestos autorizados.

No conecte la unidad a un dimmer.

No toque el cableado mientras esté conectado para evitar descargas eléctricas

Para prevenir el riesgo de descargas eléctricas o fuego, no exponga la unidad a la lluvia o la humedad.

La carcasa externa debe ser sustituida si se aprecian daños

No mire directamente la luz producida por los LED mientras la unidad está en marcha.

No hay elementos de control para el usuario en el interior. No abra la carcasa o trate de repararla por usted mismo. En el caso de que necesite ser reparada, contacte con su distribuidor.

Debido a la precisión de las lentes, por favor, evite que entren en contacto con la luz solar directa.

Canales DMX

CANAL	VALOR	FUNCION
CH1	0-10	CH4-CH7 Control Manual
	11-50	A1 Elegir Color
	51-100	A2 Cambio de salto
	101-150	A3 Gradual
	151-200	A4 Audio
	201-255	A5 Strobo
CH2	0-39	7 Color 01
	40-59	Rojo 02
	60-79	Verde 03
	80-99	Azul 04
	100-119	Amarillo 05
	120-139	Cyan 06
	140-159	Púrpura 07
	160-179	RG 08
	180-199	RB 09
	200-219	GB 10
	220-255	RGB 11
CH3	0-255	Ajuste veloc.(Combine CH1)
CH4	0-255	Master Dimmer (Combine CH5, 6, 7)
CH5	0-255	0-100% Dimmer Rojo
CH6	0-255	0-100% Dimmer Verde
CH7	0-255	0-100% Dimmer Azul

Especificaciones

Alimentación	AC 220-240V, 50/60 Hz
Consumo	40W
LEDs	12 x3W RGB (3en-1)
Funciones	DMX, Auto-run, Audio, Master/slave
Canales DMX	7 canales
Dimensiones	120 x 120 x 90 mm
Peso	600 g

AUDIOMUSIC

Avda. El Saler, 6 - Pol. Ind. L´Alteró, 46460 - Silla (Valencia) Spain

Tel. +34 963 124 088 Fax + 34 963 219 645

www.audiomusic.es audiomusic@audiomusic.es