


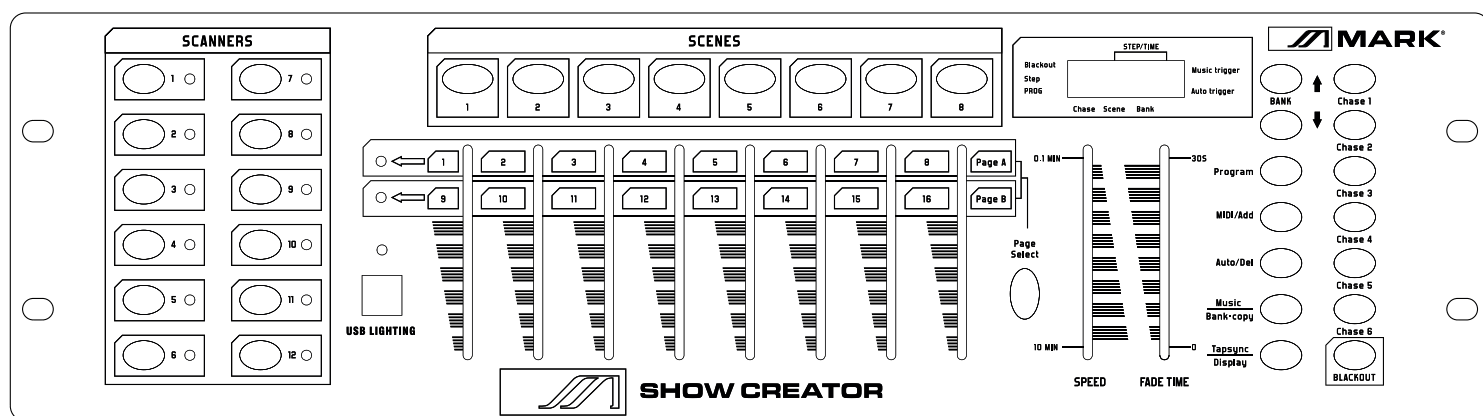

SHOW CREATOR MKII

User Manual/Manual de uso

SHOW CREATOR MKII

DMX Scanners Controller

Controlador de Scanners DMX

English Version

Page 1

Versión Español


Página 11

MAIN FEATURES


- 192 DMX Channels
- 30 Banks each composed of 8 programmable scenes
- Built-in microphone for Audio sync
- AUTO mode controlled by TAP SYNC and SPEED
- MIDI interface
- 4 digits LED display
- Blackout function
- CHASE programming and CHASE running
- Fade Time control
- DMX polarity selects
- USB port for LED desk lamp

TECHNICAL SPECIFICATIONS

Power Input	_____	DC 9 - 12 V. 300 mA. min.
DMX Output	_____	XLR 3 pin Female
MIDI Signal	_____	Standard Interface 5 pin
Audio Input	_____	Built-in Microphone
Dimensions	_____	483 x 132 x 73 mm.
Weight	_____	2,5 Kg

 

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

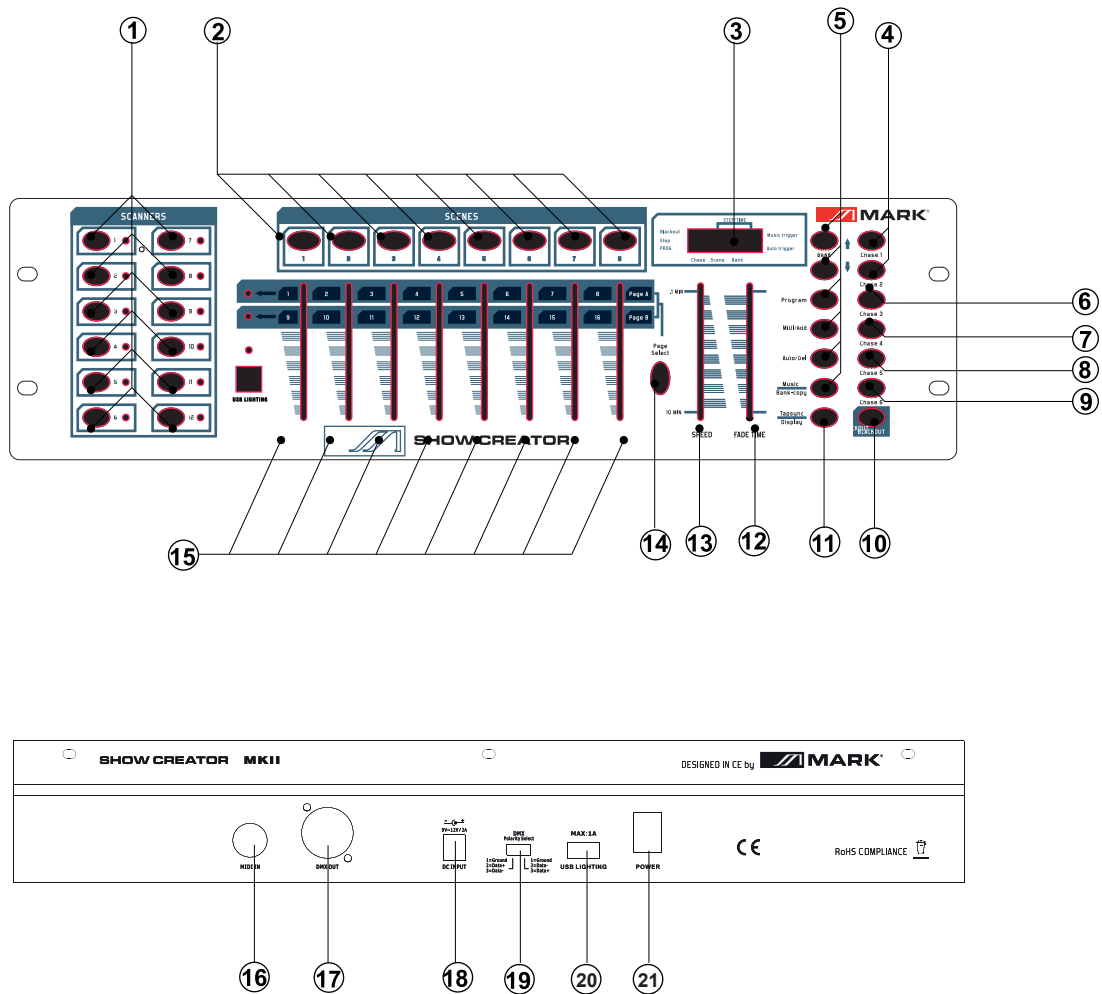

① — Scanners Buttons 1-12. — 12 scanners of 16 DMX channels & fader control.


Scanners	DMX Channels	Fader control	LED
1	1 - 16	Off	Off
2	17 - 32	Off	Off
3	33 - 48	Off	Off
4	49 - 64	Off	Off
5	65 - 80	Off	Off
6	81 - 96	Off	Off
7	97 - 112	Off	Off
8	113 - 128	Off	Off
9	129 - 144	Off	Off
10	145 - 160	Off	Off
11	161 - 176	Off	Off
12	177 - 192	Off	Off

Scanners	DMX Channels	Fader control	LED
1	1 - 16	On	On
2	17 - 32	On	On
3	33 - 48	On	On
4	49 - 64	On	On
5	65 - 80	On	On
6	81 - 96	On	On
7	97 - 112	On	On
8	113 - 128	On	On
9	129 - 144	On	On
10	145 - 160	On	On
11	161 - 176	On	On
12	177 - 192	On	On

Press a scanner button to turn on manual fader control. Press the scanner button again to turn off fader control. The LED besides the button lights or goes out to indicate this selection.

- ② — Scene Buttons — Press the scene buttons to load or stored your scenes. There are maximum of 240 programmable scenes.
- ③ — Segment Display — Shows the current activity or programming state.
- ④ — Bank Buttons(Up/Down) — Press the Up/Down buttons to select a bank 30 banks.
- ⑤ — Chase Buttons(1-6) — Used to select your programmed chase consisting a maximum of 240 scenes.
- ⑥ — Program Button — Used to activate Program mode.
- ⑦ — MIDI/Rec Button — Used to control MIDI operation or to record programs.
- ⑧ — Auto/Del Button — Used to activate Auto mode or to delete scenes and chases.
- ⑨ — Music/Bank Copy — Used to activate Music mode or to create scenes and chase programs.
- ⑩ — Blackout Button — Used to disable channel output.
- ⑪ — Tap Sync/Display — Used to create a standard beat or to change the values display between % and 255.
- ⑫ — Fade Time Slider — Used to adjust the Fade Time. Fade Time is the amount of time it takes for a fixture (scanner) to move from one position to another, for the dimmer to fade in or fade out.
- ⑬ — Speed Slider — Used to adjust the speed at which the scenes will chase.
- ⑭ — Page Select Button — Used to select faders for the fixture between Page A (1-8) and Page B (9-16)
- ⑮ — Faders — This faders are used to control intensity of channel 1-8 or channel 9-16 depending upon the selected page.
- ⑯ — MIDI IN — Receives MIDI data.
- ⑰ — DMX Out — This connector sends your DMX value to the DMX fixture or DMX pack.
- ⑱ — DC Input — DC +9-12 V. 300 mA min.
- ⑲ — DMX Polarity Select — Used to select DMX polarity.
- ⑳ — USB Port — For LED desk lamp.
- ㉑ — Switch ON/OFF — Turn ON/OFF the device.


Program Enable

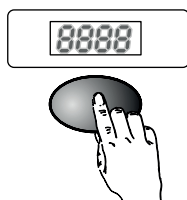

When the power is turned on, this unit enters Manual mode automatically.

Press the Program button for three seconds to activate Program mode, a fast blinking light in the Segment Display next to PROG. Indicates its selection.

Programming Scenes

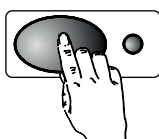

1. Enter Program mode.

2. Press the Scanner button to turn on its fader control, which is indicated by lit LED.

You may select several scanners at a time by tapping of these Scanner buttons, so you can assign several fixtures at a time with this unit.

3. Create a desired scene using the faders. The DMX value is 0 when the fader is fully down(bottom) and 255 when it is fully up(top).

4. If necessary, you may tap the Page Select button to control the second set of 8 DMX channels.



5. Once the scene is satisfactory, tap the MIDI/Rec button to program this scene into memory.

6. Tap the Bank Up/Down button to select the bank you want to store your scene into. There are total 30 bank you can select, you may store up to 8 scenes into each bank.


7. Tap the Scene button to store your scene, all LEDs and the Segment Display will flash three times briefly indicating this operation, then the Segment Display will show the bank and the scene.

8. Repeat steps 3-7 until all desired scenes have been programmed into memory. Tap the Scanner button again to turn off its fader control.
To assign another scanner (fixture), you may tap the corresponding Scanner button to turn on its fader control, then you may begin your programming again.

9. If you wish not continue your programming, press and hold down the Program button for three seconds to exit Program mode, the blinking light in the Segment Display goes out indicating this selection.

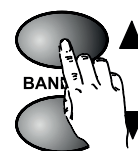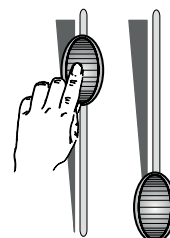

SCANNER BUTTONS 1 - 12

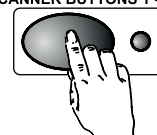

MIDI / REC




SCENE BUTTONS 1-8



PROGRAM



Scene Editing

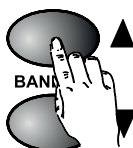


1. Program enable.

2. Tap the Bank Up/Down button to select the bank that contains the scene you wish to edit.

3. Select the scene you want to edit tapping its Scene button.

4. Use the Faders to make your desired adjustments.

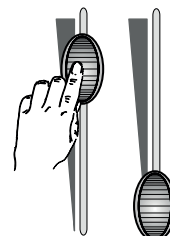

SCENE BUTTONS 1-8



Scene Editing

MIDI / REC



- 5 . Once you've made your changes, tap the MIDI/Rec button
- 6 . Tap the Scene button that corresponds to the scene you're editing. This will overwrite the exited scene.

NOTE:


Be sure to select the same scene in steps 3 and 6, otherwise you may accidentally record over an exited scene.

SCENE



Scanner Copy


SCANNER

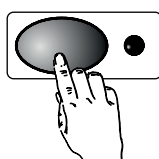

This function allows you to copy the setting of one scanner to another.

- 1 . Press and hold down the Scanner button you want to copy.
- 2 . While holding the Scanner button, tap the Scanner button you want to copy to.

SCANNER

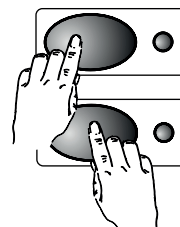

Scene Copy



- 1 . Program enable.
- 2 . Tap the Bank Up/Down button to select the bank that contains the scene you wish to copy.
- 3 . Select the scene you want to copy by tapping its Scene button.

SCENE



- 4 . Tap the Bank Up/Down button to select the bank you wish to copy the scene to.
- 5 . Tap the MIDI/Rec button.

MIDI / REC



SCENE



- 6 . Tap the Scene button you wish copy the scene to.

Delete a Scene

SCENE



- 1 . Tap the desired Scene button to select the scene you wish to delete.
- 2 . Press and hold down the Auto/Del button. While holding down the Auto/Del button, tap the Scene button that stores the scene you wish to delete. When a programmed scene is deleted, all DMX channel in this scene is set to 0.

AUTO/DEL




SCENE



Delete all Scenes

This function will reset all DMX channel to 0 output.

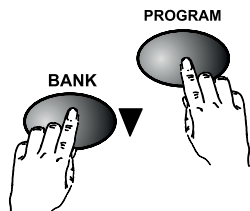


1. With the power off, press and hold down the Program and Bank Down buttons at a time.
2. Apply power again, all scenes should be cleared.

Bank Copy



1. Program enable.
2. Tap the Bank Up/Down button to select the bank you wish to copy.
3. Tap the MIDI/Rec button.
4. Tap the Bank Up/Down button to select the bank you wish copy to.
5. Tap the Music/Bank Copy button, all LEDs and the Segment Display will flash three times briefly indicating the function has been completed.
6. Press the Program button for three seconds to exit Programming mode.

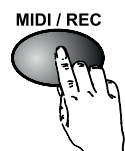

Programming Chase

You must program scenes before you can program chases, this function allows you to store up to 240 scenes into one chase.


CHASE BUTTONS 1-6



MIDI / REC



1. Program enable.
2. Tap the Chase button to select the chase to program. Each time you can select a chase only.
3. Select a desired scene from the bank that has stored scenes.(described in Programming Scenes).
4. Tap the MIDI/Rec button.
5. Repeat steps 3-4 until you've reached your desired effect. You may record up to 240 scenes into a chase.

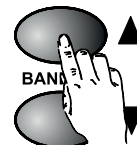

Program a bank of scenes into a Chase

MUSIC/BANK COPY


 


1. Program enable.
2. Select the chase using Chase buttons 1-6.
3. Use Bank Up/Down button to select the bank that contains the scenes you wish to copy.
4. Tap the Music/Bank Copy button.
5. Tap the MIDI/Rec Copy button, all LEDs and the Segment Display button causing a highlight next to STEP, the first digit in the Segment Display shows the chase and the next three digits show its step.

MIDI / Rec Copy




Add a Step

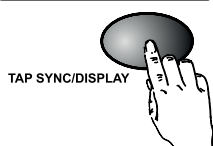

MIDI / REC



1. Program enable.
2. Select the chase you wish to add a step to.
3. Tap the Tap Sync/Display button causing a highlight next to STEP, the first digit in the Segment Display shows the chase and the next three digits shows its step.
4. Tap the Bank Up/Down button to scroll to the step you wish to add a step after.

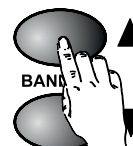

5. Tap the MIDI/Rec button, the Segment Display will read the step one higher than before.


 
For example, if you want to insert a step between step 3 and step 4, and you scroll to step 3, when you tap the MIDI/Rec button, the Segment Display will read step 4.

6. Tap the Tap Sync/Display button again, the Segment Display shows the current chase, scene and bank.
Create a desired scene and record it as a new step or select a programmed scene you wish to add into this chase.

Hints : You may tap the Tap Sync/Display button to change the display mode between and the bank.

7. Tap the MIDI/Rec button again, all LEDs and the Segment Display will flash three times briefly indicating the new step has been inserted into this chase.


Delete a Step

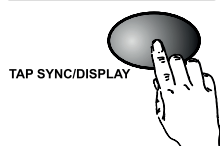

AUTO/DEL



1. Program enable.
2. Select the chase that contains the step you wish to delete.
3. Tap the Tap Sync/Display button causing the Segment Display shows the steps.
4. Tap the Bank Up/Down button to scroll to the step you wish to delete.
5. Tap the Auto/Del button to delete the step, all LEDs and the Segment Display will flash three times briefly indicating that the step has been deleted.

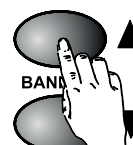


Delete a Chase


CHASE Button 1-6



1. Select the chase you wish to delete.
2. Press and hold down the Auto/Del button.
Tap the Chase button while holding down the Auto/Del button, all LEDs and the Segment Display will flash three times briefly indicating this chase has been deleted.

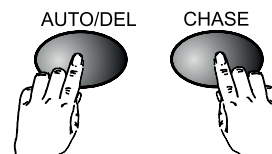


Delete all Chases

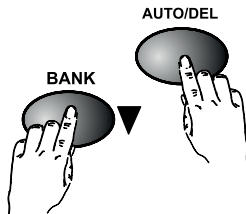

1. With the power off, press and hold down the Auto/Del and Bank Down buttons same time.
2. Apply the power again.

Running Scenes

Manual Mode

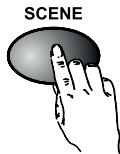

1. When the power is turned on, this unit enters Manual mode automatically.
2. Make sure Auto trigger and Music trigger indicators in the Segment Display are both off.
3. Use the bank Up/Down button to select the bank that contains the scenes you wish to run.
4. Tap the Scene button to select the scene to run.

Auto Mode




This function allows you to run a bank of programmed scenes in a sequential loop.

1. Tap the Auto/Del button to activate Auto mode. A highlight next to AUTO TRIGGER will indicate Auto mode.




2. Use the Bank Up/Down button to select a bank of scenes to run

3. After selecting the bank of scenes you wish to run, you can use the Speed slider(or Tap Sync/Display button) and Fade Time slider to adjust the scenes to your desired effect.

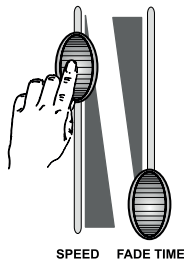

Hints:

The Tap Sync button is used to set the speed by tapping the button several times, the last two taps will define the speed with a maximum of 10 minutes. Tap Sync will override any previous setting of the Speed slider unless the slider is moved again.

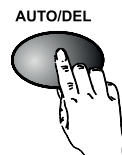

4. Tap the Auto/Del button again to exit Auto mode.

Music Mode



1. Tap the Music/Bank Copy button to activate Music mode. A highlight next to MUSIC TRIGGER indicates Music Mode.
2. Use the Bank Up/Down button to select the bank that holds the scenes you wish to run. The scenes you've selected will chase in a sequential order according to the music rhythms detected by the built-in microphone
3. Tap the Music/Bank Copy button again to exit Music mode.



Running Chases

You must program scenes before you can run chases.

Manual Mode




1. When the power is turned on, this unit enter Manual mode automatically.
2. Select your desired chase by tapping one of the six Chase buttons. A second tap of this button will deactivate this function.
3. Use the Speed slider (or Tap Sync button) and Fade Time slider to adjust the current scenes to your desired effects.
4. Use the Bank Up/Down button to scroll through the chase to run all banks of scenes.

Auto Mode

AUTO/DEL




CHASE BUTTONS 1-6

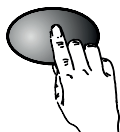

1. Tap the Auto/Del button to activate Auto mode. A highlight next to AUTO TRIGGER will indicate Auto mode.
2. Select your desired chase by tapping one of the six Chase buttons. A second tap of this button will deactivate this function.
3. Use the Speed slider (or Tap Sync) and Fade Time slider to adjust the chase to your desired effects.

You may select several chases at a time, the chases will run in sequence that you select the chases.

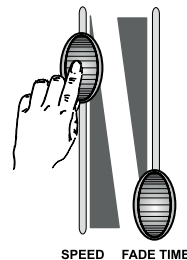

SPEED FADE TIME

Music Mode

MUSIC/BANK COPY



1. Tap the Music/Bank Copy button to activate Music mode. A highlight in the Segment Display next to MUSIC TRIGGER will indicate Music mode.
2. Select your desired chase by tapping one of the six Chase buttons, the chase will be triggered by the music rhythms. You may select several chases at a time.

CHASE BUTTONS 1-6



MIDI Operation

MIDI Channel Setting

MIDI/REC



1. Press and hold down the MIDI/Rec button for three seconds, the last two digits of the Segment Display will flash to indicate MIDI channel setting is ready.
2. Use the Bank Up/Down button to select the DMX channel 01-16 to assign to MIDI channel.
3. Press and hold down the MIDI/Rec button for three seconds to store your setting and to deactivate MIDI setting. If you wish to give up your setting, tap any other button (except Bank Up/Down buttons) to exit MIDI mode.



Implementation

This unit receives Note On signals, which enables to run 15 bank (01-15) of scenes and 6 chases of scenes. In addition, blackout function can be activated by MIDI signal.

BANK	NOTE N°	FUNCTION
Bank 1	00 to 07	Turn on or off Scenes 1-8 of Bank 1
Bank 2	08 to 15	Turn on or off Scenes 1-8 of Bank 2
Bank 3	16 to 23	Turn on or off Scenes 1-8 of Bank 3
Bank 4	24 to 31	Turn on or off Scenes 1-8 of Bank 4
Bank 5	32 to 39	Turn on or off Scenes 1-8 of Bank 5
Bank 6	40 to 47	Turn on or off Scenes 1-8 of Bank 6
Bank 7	48 to 55	Turn on or off Scenes 1-8 of Bank 7
Bank 8	56 to 63	Turn on or off Scenes 1-8 of Bank 8
Bank 9	64 to 71	Turn on or off Scenes 1-8 of Bank 9
Bank 10	72 to 79	Turn on or off Scenes 1-8 of Bank 10
Bank 11	80 to 87	Turn on or off Scenes 1-8 of Bank 11
Bank 12	88 to 95	Turn on or off Scenes 1-8 of Bank 12
Bank 13	96 to 103	Turn on or off Scenes 1-8 of Bank 13
Bank 14	104 to 111	Turn on or off Scenes 1-8 of Bank 14
Bank 15	112 to 119	Turn on or off Scenes 1-8 of Bank 15
Chase 1	120	Turn on or off Chase 1
Chase 2	121	Turn on or off Chase 2
Chase 3	122	Turn on or off Chase 3
Chase 4	123	Turn on or off Chase 4
Chase 5	124	Turn on or off Chase 5
Chase 6	125	Turn on or off Chase 6
	126	BLACKOUT

CARACTERISTICAS PRINCIPALES


- 192 Canales de control DMX
- 30 bancos cada uno compuesto de 8 escenas programables
- Micrófono incorporado para sincronismo por Audio
- Modo AUTO controlado por TAP SYNC y SPEED
- Interfaz de control MIDI
- Pantalla LED de 4 dígitos
- Función Blackout
- Programación y ejecución de Chase
- Control de tiempo de fundido
- Selección de polaridad DMX
- Puerto USB para lámpara LED

ESPECIFICACIONES TÉCNICAS

Alimentación	_____	DC 9 - 12 V. 300 mA. min.
Salida DMX	_____	Hembra XLR 3 pin
Señal MIDI	_____	Standard Interfaz 5 pin
Entrada Audio	_____	Micrófono incorporado.
Dimensiones	_____	483 x 132 x 73 mm.
Peso	_____	2,5 Kg



Este símbolo en su equipo o embalaje, indica que el presente producto no puede ser tratado como residuos domésticos normales, sino que deben entregarse en el correspondiente punto de recogida de equipos electrónicos y eléctricos. Asegurándose de que este producto es desechado correctamente, Ud. está ayudando a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación de este producto. EL reciclaje de materiales ayuda a conservar las reservas naturales. Para recibir más información, sobre el reciclaje de este producto, contacte con su ayuntamiento, su punto de recogida más cercano o el distribuidor donde adquirió el producto.

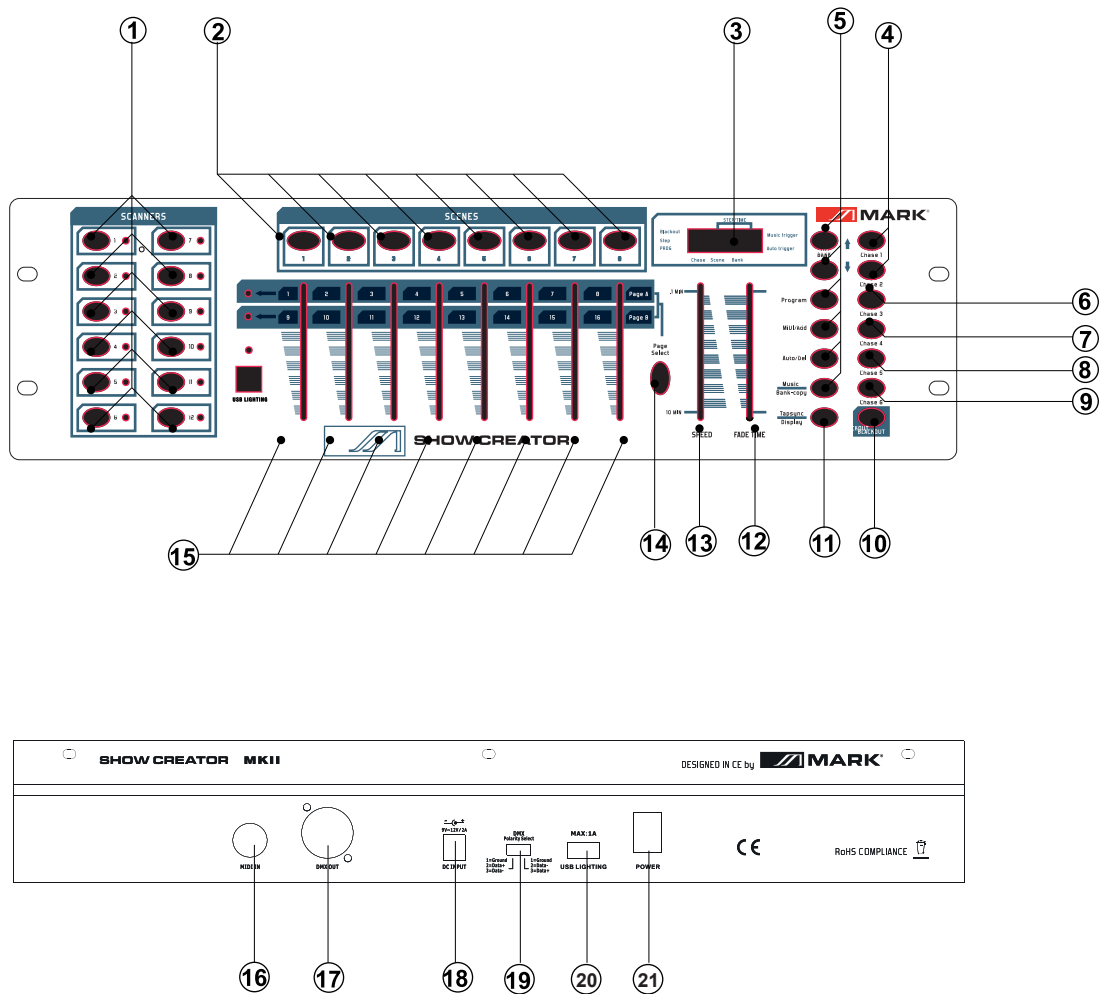

FRONTAL

① — Pulsadores SCANNER 1-12. Seleccione los Scanners 1-12 en grupos de 16 canales cada uno.

Scanners	DMX Channels	Fader control	LED
1	1 - 16	Off	Off
2	17 - 32	Off	Off
3	33 - 48	Off	Off
4	49 - 64	Off	Off
5	65 - 80	Off	Off
6	81 - 96	Off	Off
7	97 - 112	Off	Off
8	113 - 128	Off	Off
9	129 - 144	Off	Off
10	145 - 160	Off	Off
11	161 - 176	Off	Off
12	177 - 192	Off	Off

Scanners	DMX Channels	Fader control	LED
1	1 - 16	On	On
2	17 - 32	On	On
3	33 - 48	On	On
4	49 - 64	On	On
5	65 - 80	On	On
6	81 - 96	On	On
7	97 - 112	On	On
8	113 - 128	On	On
9	129 - 144	On	On
10	145 - 160	On	On
11	161 - 176	On	On
12	177 - 192	On	On

 
Al volver a presionar el pulsador SCANNER se libera el Scanner previamente seleccionado.

- ② — Pulsadores **SCENE** — Carga o Graba una escena (240 max)
- ③ — **DISPLAY** — Muestra el estado de ejecución de la consola.
- ④ — Pulsadores **BANCK** — Presione UP o DOWN para seleccionar uno de los 30 bancos disponibles.
- ⑤ — Pulsadores **CHASE** — Selecciona el Chase a reproducir. Cada Chase puede tener un máximo de 240 escenas
- ⑥ — Pulsador **PROGRAM** — Activa el modo PROGRAM.
- ⑦ — Pulsador **MIDI/REC** — Activa el modo MIDI. También se usa para grabar programas.
- ⑧ — Pulsador **AUTO/DEL** — Activa el modo AUTO de reproducción. También sirve para borrar Escenas y Chases.
- ⑨ — Pulsador **MUSIC/BANK COPY** — Activa el modo MUSIC. Crea escenas y programas.
- ⑩ — Pulsador **BLACKOUT** — Deja todos los canales a cero.
- ⑪ — Pulsador **TAP SYNC/DISPLAY** — Utilizado para asignar la velocidad de ejecución de un chase mediante la frecuencia de pulsación. Cambia los valores del Display de % a 255.
- ⑫ — Potenciómetro **FADE TIME** — Utilizado para controlar los tiempos de fundido de un paso (escena) a otro.
- ⑬ — Potenciómetro **SPEED** — Controla la velocidad de los Chases.
- ⑭ — Pulsador **PAGE SELECT** — Selecciona las páginas A y B de los 8 potenciómetros de canal.
- ⑮ — Potenciómetro de Canal — Controla el nivel de los 16 canales (A: 1-8, B: 9-16), asignados a cada canal.

TRASERA

- ⑯ — **MIDI IN** — Entrada de MIDI.
- ⑰ — Polarizador **DMX** — Selecciona la polarización del DMX (+2, -3 ó -2, +3).
- ⑱ — Conector **DMX** — Salida de señal DMX.
- ⑲ — Entrada **DC** — Entrada Tensión de Alimentación (+9-12 V DC. 300 mA. min.)
- ⑳ — Puerto **USB** — Para lámpara LED.
- ㉑ — Switch **ON/OFF** — Enciende / Apaga el dispositivo.

INICIO DE PROGRAMACIÓN




Cuando se conecta la alimentación de la consola, ésta entra en el "MODO MANUAL" automáticamente.

Presione durante 3 segundos el pulsador "PROGRAM", un rápido parpadeo del led "PROG" indicará que ha entrado en el modo PROGRAMACIÓN.

PROGRAMAR ESCENAS

SCANNER BUTTONS 1-12

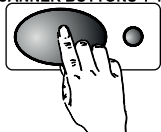


1. Entre en el modo PROGRAMACIÓN

2. Presione el pulsador SCANNERS según el móvil a seleccionar (1-12). Puede seleccionar uno o varios móviles al mismo tiempo.

3. Cree la escena deseada utilizando los potenciómetros del canal 1-8.

4. Para controlar los canales 9-16 de cada móvil, presione el pulsador PAGE SELECT.


5. Una vez configurada la escena, presione el pulsador MIDI/REC para preparar la inserción de esta escena en la memoria.

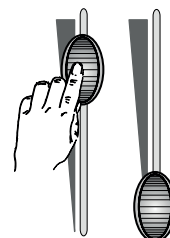

MIDI / REC



6. Presione los pulsadores ▲-▼ de BANK para seleccionar el banco donde grabará las escenas. Tiene un total de 30 bancos, en los que puede grabar hasta 8 escenas en cada uno de ellos.

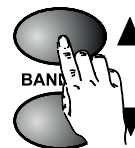


SCENE BUTTONS 1-8



7. Presione el pulsador SCENES 1-8 donde quiera ubicar esta escena. Todos los Leds y el Display parpadearán tres veces, indicando que la programación de la escena se ha realizado.

8. Repita los pasos 3 - 7 para crear las siguientes escenas.

SCANNER BUTTONS 1 - 12

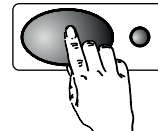

PROGRAM



9. Para finalizar la programación, presione durante 3 segundos el pulsador PROGRAM. La consola pasará automáticamente a la función BLACK OUT.

EDITAR ESCENAS



SCENE BUTTONS 1-8




1. Entre en el modo PROGRAMACIÓN.

2. Seleccione con el pulsador BANK ▲-▼ la escena que desea editar.

3. Con el pulsador 1-8 de SCENES elija la escena a editar.

4. Use los potenciómetros de canal y los pulsadores 1-12 SCANNER para seleccionar el móvil y darle nuevos niveles.

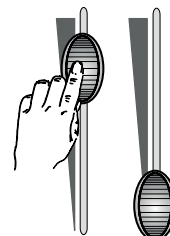

EDITAR ESCENAS

MIDI / REC

 


- Una vez efectuados los cambios en la escena, presione el pulsador MIDI/REC.

- Presione el pulsador SCENES que se corresponda con la escena editada. La nueva programación se escribirá sobre la escena anterior.


- Salga del modo PROGRAMACIÓN.

SCENE



COPIAR UN MOVIL

SCANNER

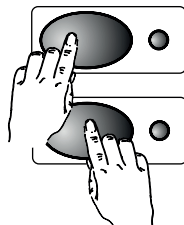

Esta función permite copiar la preparación de un móvil a otro.

- En el modo PROGRAMACIÓN presione y mantenga el pulsador SCANNER a copiar.
- Mientras mantiene presionado el pulsador del móvil original, presione el pulsador SCANNER al que desea transferir la preparación del móvil anterior. La copia ha sido realizada.

COPIAR UNA ESCENA



- Entre en el modo PROGRAMACIÓN
- Presione los pulsadores ▲-▼ BANK para seleccionar el banco que contiene la escena a copiar.

- Selecione la escena a copiar.



- Presione los pulsadores ▲-▼ BANK para seleccionar el banco donde se copiará la escena.

- Presione el pulsador MIDI/REC

SCENE



- Presione la escena donde será descargada la escena copiada.

SCENE



MIDI / REC



BORRAR UNA ESCENA

SCENE



- En el modo PROGRAMACIÓN seleccione la escena que será borrada.

 
- Presione y mantenga, el pulsador AUTO/DEL. Seguidamente presione el pulsador de la escena que desea borrar.

La escena ha sido borrada y todos los canales de ésta, están a cero.


AUTO/DEL



SCENE




BORRAR TODAS LAS ESCENA

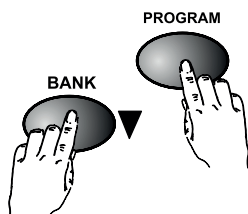


1. Con la alimentación de la consola apagada presione y mantenga los pulsadores BANK y PROGRAM al mismo tiempo.
2. Conecte entonces la alimentación y todas las escenas serán borradas.

COPIAR UN BANCO

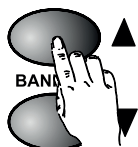

1. Entre en el modo PROGRAMACIÓN.
2. Seleccione el banco que será copiado con los pulsadores ▲-▼ BANK.
3. Presione el pulsador MIDI/REC.
4. Seleccione el nuevo banco con los pulsadores ▲-▼ BANK.

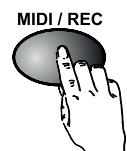

5. Presione el pulsador MUSIC/BANK COPY, todos los leds y el display parpadearán 3 veces. La copia ha sido realizada.




PROGRAMAR UN CHASE

Se pueden grabar hasta 240 escenas en cada chase.

CHASE BUTTONS 1-6



1. Entre en el modo PROGRAMACIÓN.
2. Seleccione el chase a programar con los pulsadores CHASE 1-6.

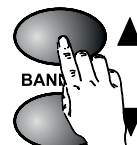

4. Seleccione con los pulsadores SCENNES 1-8 la escena elegida.

5. Presione el pulsador MIDI/REC. Los leds y el display parpadearán 3 veces, indicando que el paso del chase ha sido grabado.

7. Una vez finalizada la grabación del chase, salga del modo PROGRAMACIÓN.

3. Seleccione con los pulsadores ▲-▼ BANK, el banco o bancos donde se encuentran las escenas que conformarán el chase.

6. Repita los pasos 3, 4 y 5 para los siguientes pasos del chase.

MIDI / REC




 
PROGRAMAR UN BANCO DE ESCENAS EN UN CHASE

MUSIC/BANK COPY



1. Entre en el modo PROGRAMACIÓN.
2. Seleccione con los pulsadores ▲-▼ BANK el banco que será copiado en el chase.
3. Presione el pulsador MUSIC-BANK COPY.
4. Presione el pulsador MIDI-REC. Todos los leds y el display parpadearán 3 veces, indicando que el banco ha sido grabado en el chase.
5. Salga del modo PROGRAMACIÓN.


AÑADIR UN PASO A UN CHASE

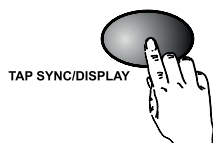

MIDI / REC




1. Entre en el modo PROGRAMACIÓN.
2. Seleccione el chase a modificar.
3. Presione el pulsador TAP SYNC/DISPLAY. Se encenderá STEP. Ahora el primer dígito del display muestra el chase elegido y los 3 siguientes dígitos muestran el nº de paso del chase.
4. Presione los pulsadores ▲-▼ BANK hasta visualizar la escena a la que "DESPUES" añadirá el nuevo paso.

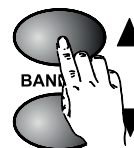


5. Presione el pulsador MIDI/REC, el display mostrará ahora el nº del paso nuevo que va a ser insertado.
6. Presione de nuevo TAP/SYNC, vuelve a mostrar el nº de chase, la escena y el banco.
7. Cree una nueva escena o puede elegirla de cualquier banco, si ya está creada y grabela presionando MIDI/REC. Los leds y el display parpadearán 3 veces, indicando que el paso ha sido añadido.
8. Repita los pasos 3, 4, 5, 6 y 7 si desea añadir nuevos pasos al chase.
9. Salga del modo PROGRAMACIÓN.

BORRAR UN PASO DE UN CHASE

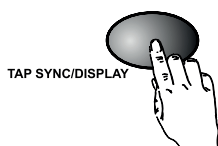

AUTO/DEL

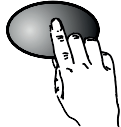

1. Entre en el modo PROGRAMACIÓN.
2. Seleccione el chase a modificar.
3. Presione el pulsador TAP SYNC/DISPLAY. Se encenderá STEP. Ahora el primer dígito del display muestra el chase elegido y los 3 siguientes dígitos muestran el nº de paso del chase.
4. Presione los pulsadores ▲-▼ BANK hasta visualizar la escena a la que "DESPUES" añadirá el nuevo paso.
5. Una vez elegida la escena a eliminar, presione el pulsador AUTO/DEL. Todos los leds y el display parpadearán 3 veces indicando que el paso ha sido borrado.
6. Salga del modo PROGRAMACIÓN.





BORRAR UN CHASE

CHASE Button 1-6




1. Entre en el modo PROGRAMACIÓN.
2. Seleccione el Chase a borrar.
3. Presione y mantenga el pulsador AUTO/DEL.
4. Mientras mantiene el pulsador AUTO/DEL, pulse el Chase que desea borrar.
5. Todos los Leds parpadearán 3 veces, indicando que el Chase ha sido borrado.
6. Salga del modo PROGRAMACIÓN.

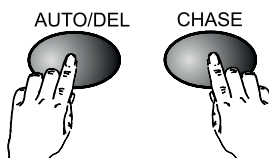

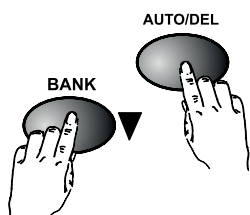BORRAR TODOS LOS CHASES


1. Con la alimentación de la consola desconectada, presione y mantenga los pulsadores AUTO/DEL y ▼BANK.
2. Conecte la alimentación.
3. Todos los Leds y el Display parpadearán 3 veces, indicando que se han borrado todos los chases.


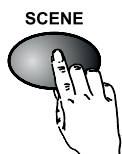
EJECUTAR ESCENAS
MODO MANUAL


1. Cuando conectamos la alimentación, la consola pasa automáticamente a MODO MANUAL
2. Asegurese que los Leds MUSIC TRIGGER y AUTO TRIGGER están apagados.
3. Use los pulsadores BANK para seleccionar el banco que contiene las escenas a ejecutar.
4. Seleccione con los pulsadores SCENES 1-8 la escena que desea visualizar.

MODO AUTO


Este modo permite ejecutar las escenas en un Loop secuenciado.

1. Seleccione el banco con los pulsadores ▲-▼BANK
2. Presione el pulsador AUTO/DEL, el led AUTO TRIGGER se encenderá.
3. Ajuste la velocidad del loop con el potenciómetro FADE TIME.
4. También puede ajustar la velocidad del Loop presionando dos veces el pulsador TAP SYNC. La frecuencia entre los dos pulsadores será la velocidad de ejecución del Loop.
5. Al volver a mover el potenciómetro SPEED se perderá la información de velocidad grabado con el TAP SYNC.

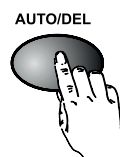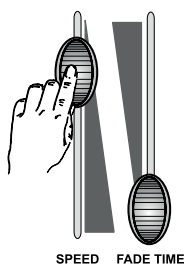

6. Presione el pulsador AUTO/DEL para salir del modo AUTO.

MODO MUSIC


1. Seleccione con el pulsador ▲-▼BANK el banco que contiene las escenas a ejecutar.
2. Presione el pulsador MUSIC/BANK COPY para que el programa se ejecute al ritmo de la musica.
3. Presione de nuevo MUSIC/BANK COPY para salir del MODO MUSIC.



EJECUTAR CHASES

MODO AUTO

CHASE BUTTONS 1-6




1 . Seleccione el chase con el pulsador CHASE 1-6.

2 . Presione el pulsador AUTO/DEL para iniciar el Loop.

AUTO/DEL



3 . Utilice los potenciómetros SPEED y FADE TIME para ajustar los parámetros de velocidad.

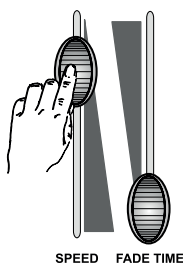

SPEED FADE TIME

4 . Puede añadir diversos chases que serán ejecutados en el orden que sean seleccionados.

5 . El control del tiempo y fundido es el mismo para los chases.

6 . Puede ajustar la velocidad del chase con el pulsador TAP SYNC del mismo modo que se ajustan las escenas.

MODO MUSIC

CHASE BUTTONS 1-6



1 . Seleccione el chase con el pulsador CHASE 1-6.

2 . Presione el pulsador MUSIC/BANC COPY para que el chase empiece a ejecutarse al ritmo de la música.

3 . Presione de nuevo MUSIC/BANK COPY para salir del MODO MUSIC.

MUSIC/BANK COPY



FUNCIÓN MIDI

1 . Presione durante 3 segundos el pulsador MIDI/REC. Los últimos 2 dígitos del Display parpadearán indicando que el canal MIDI está preparado.

MIDI/REC



2 . Presione el pulsador BANK UP/DOWN para seleccionar el canal de DMX 1-16 para asignar el canal MIDI.



3 . Para grabar nuevos ajustes presione durante 3 segundos el pulsador MIDI/REC. Para salir presione cualquier pulsador excepto Bank Up/Down.

PUESTA EN FUNCIONAMIENTO

Cuando recibe la señal NOTE ON nos permite el acceso a los bancos de escenas del 1 al 15 y a 6 chases de escenas. También se puede activar el BLACK OUT con la señal MIDI.

BANCO	NOTE Nº	FUNCIÓN
BANCO 1	00 al 07	Encender o Apagar Escenas 1-8 del Banco 1
BANCO 2	08 al 15	Encender o Apagar Escenas 1-8 del Banco 2
BANCO 3	16 al 23	Encender o Apagar Escenas 1-8 del Banco 3
BANCO 4	24 al 31	Encender o Apagar Escenas 1-8 del Banco 4
BANCO 5	32 al 39	Encender o Apagar Escenas 1-8 del Banco 5
BANCO 6	40 al 47	Encender o Apagar Escenas 1-8 del Banco 6
BANCO 7	48 al 55	Encender o Apagar Escenas 1-8 del Banco 7
BANCO 8	56 al 63	Encender o Apagar Escenas 1-8 del Banco 8
BANCO 9	64 al 71	Encender o Apagar Escenas 1-8 del Banco 9
BANCO 10	72 al 79	Encender o Apagar Escenas 1-8 del Banco 10
BANCO 11	80 al 87	Encender o Apagar Escenas 1-8 del Banco 11
BANCO 12	88 al 95	Encender o Apagar Escenas 1-8 del Banco 12
BANCO 13	96 al 103	Encender o Apagar Escenas 1-8 del Banco 13
BANCO 14	104 al 111	Encender o Apagar Escenas 1-8 del Banco 14
BANCO 15	112 al 119	Encender o Apagar Escenas 1-8 del Banco 15
CHASE 1	120	Encender o Apagar Chase 1
CHASE 2	121	Encender o Apagar Chase 2
CHASE 3	122	Encender o Apagar Chase 3
CHASE 4	123	Encender o Apagar Chase 4
CHASE 5	124	Encender o Apagar Chase 5
CHASE 6	125	Encender o Apagar Chase 6
	126	BLACKOUT



EQUIPSON, S.A.

Avda. El Saler, 14 - Pol. Ind. L'Alteró, 46460 - Silla (Valencia) Spain

Tel. +34 96 121 63 01 Fax + 34 96 120 02 42

www.equipson.es support@equipson.es