


MOVILED 340

Quick Guide – Version 1.0

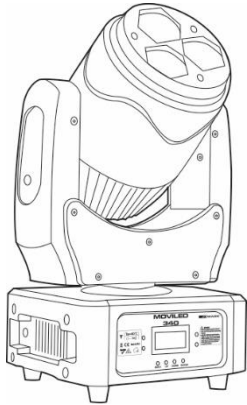

LEDs: 3x 40W RGBW 4-in1 LEDs

Control modes: DMX512, Audio, Auto, Master/Slave.

Channels DMX: 18 & 26 channels

Motorized zoom: 8° - 55°

120 W RGBW Moving Head LED


SAFETY INSTRUCTIONS

- Use the closed QR code to download the last user manual version from our website.
- Before connect the device, check your country safety regulations.
- Don't use this device close to the water or high humidity places. Clean only with dry cloth.
- Don't install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Make certain that the equipment is always installed so that is cooled and can't overheat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by MARK.
- Unplug this device during lightning storms or when unused for long periods of time.
- The technical service is required when the device has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, doesn't operate normally or has been dropped.



MOVILED 340

Guía rápida – Versión 1.0

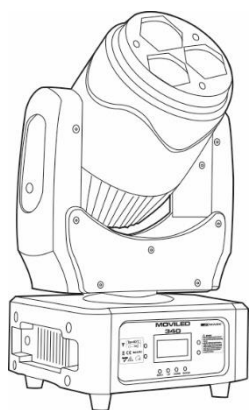

LEDs: 3x 40W LEDs RGBW 4-en1

Modos de control: DMX512, Audio, Auto y Master/Slave.

Canales DMX: 12 y 14 canales

Zoom motorizado: 8° - 55°

Cabeza Móvil RGBW LED 120W

INSTRUCCIONES DE SEGURIDAD

- Use el Código QR adjunto para descargar la última versión del manual de usuario desde nuestro sitio web.
- Respete las instrucciones de seguridad de su país cuando instales este dispositivo
- No use este dispositivo cerca del agua o zonas altamente húmedas. A la hora de limpiarlo, utilice un paño seco.
- No instale el dispositivo cerca de ninguna fuente de calor o fuego tales como calefactores, estufas o incluso amplificadores que produzcan calor. Asegúrese de que, una vez instalado el dispositivo, esté en un lugar fresco y seco.
- Proteja el cable de alimentación para no ser pisado o manipulado.
- Únicamente utilice accesorios especificados por MARK
- Desenchufe el dispositivo si no va a ser utilizado en largos periodos de tiempo.
- El dispositivo será reparado por el servicio técnico oficial cuando esté dañado, tal como el cable este deteriorado o el conector esté estropeado, así como si el dispositivo ha sufrido contacto con líquidos o no opera correctamente.

