



# ER 55 S MEGAPHONE

EN  
**WORK**<sup>PRO</sup>® W

## Operating instructions




For speak, select "TALK" position in the Siren/Talk mode switch (2)

1. When holding the megaphone at the grip, fix the microphone hanger inlet in the microphone fixing hanger, then press the (1) press-to-talk power on-off switch back with your index finger.
2. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
3. Turn the sound volume control, on the right hand side of the microphone and adjust the sound level to optimum without causing howling.
4. If you need to use the built-in siren, select it in the Siren/Talk mode switch (2) and press the activation button (3) in the rear side of the grip. If you want to continue speaking, select "TALK" position in the switch (2)

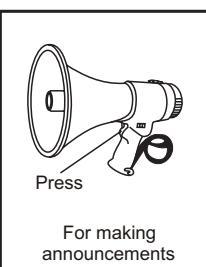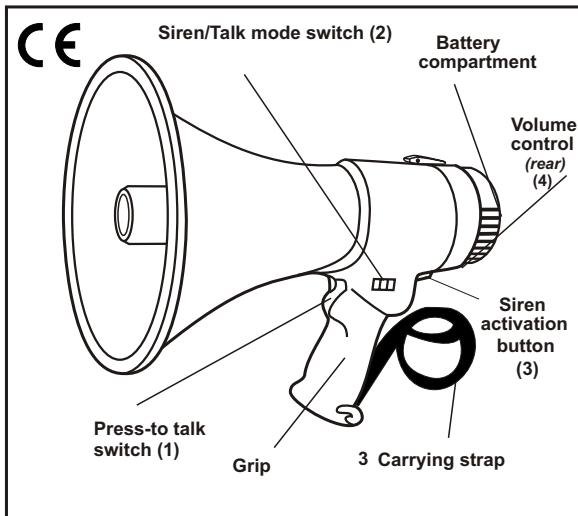

### To replace batteries

- 1 Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.
- 2 Insert 8 type C (UM-2) batteries in the battery case observing correct polarity.
- 3 Insert the battery case with batteries into the battery compartment of the megaphone observing correct polarity.

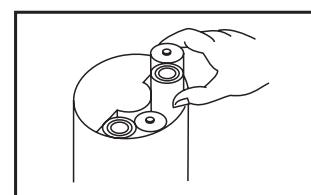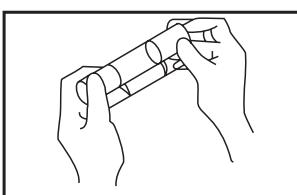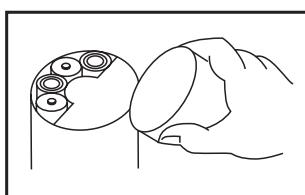

## Notes

- 1 Make sure the batteries are inserted correctly, observing correct polarity.
- 2 Remove the batteries when the megaphone is not in use for a long period of time.
- 3 Drained batteries do not give sufficient sound volume. Replace the batteries at regular intervals.

## Technical specifications

Power output .....	25 W
Range.....	0.5-0.7km depending on operating conditions
Power.....	8 C type batteries (not supplied)
Weight.....	1.65kg approx. excluding batteries
Dims.....	230mm (dia.) 340mm

ES


# ER 55 S MEGAFONO

**WORK<sup>®</sup>** PRO

## Instrucciones de Uso




Para hablar, seleccione "TALK" en el conmutador de modo Siren/Talk (2)

- Sujete el megáfono con la mano, colocando el dedo índice sobre el gatillo (1), oprimiéndolo para hablar y soltándolo cuando no lo use.
- Coloque la boca del megáfono hacia adelante y hable a través del micrófono situado en la parte trasera. Colóquelo cerca de los labios y hable con normalidad.
- Gire el control de volumen junto al micrófono y ajuste el sonido a un nivel óptimo sin causar estruendo.
- Si necesita utilizar la sirena incorporada, selecciónela en el conmutador Siren/Talk (2) y presione el botón de activación (3) situado en la parte trasera de la empuñadura. Si desea continual hablando, seleccione "TALK" en el conmutador (2).

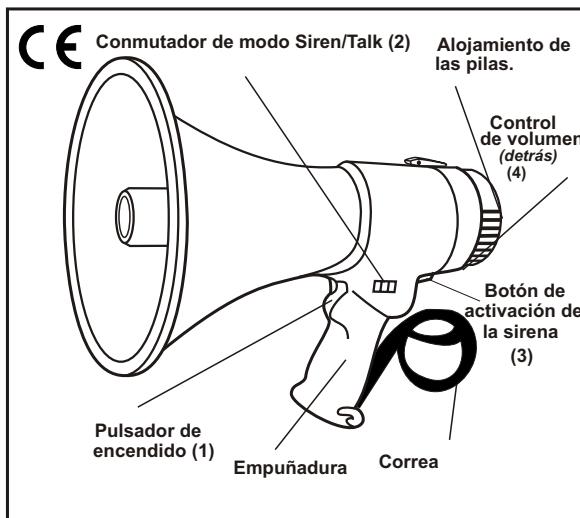

### Sustitución de las pilas

- Libere la pestaña que sujetla la tapa que da acceso al alojamiento de las pilas.
- Retire los tubos portapilas, e inserte 8 pilas tipo C, cuidando la correcta polaridad, según se señala en el mismo portapila.
- Coloque las pilas en el alojamiento del megáfono y vuelva a cerrar la tapa del megáfono con su pestaña.

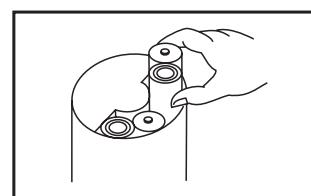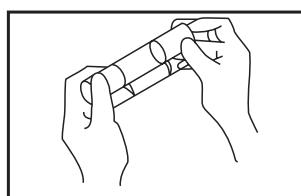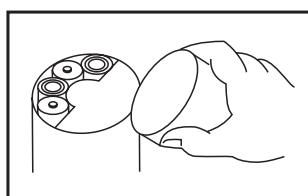

### Notas

- Identifique en las pilas la polaridad negativa y positiva.
- Retire las pilas del megáfono cuando este no se utilice por un periodo largo de tiempo.
- Es muy importante colocar las pilas en su alojamiento, observando la polaridad de las pilas.

### Especificaciones Técnicas

Potencia .....	25W.
Rango .....	0.5-0.7 Km, dependiendo de las condiciones de funcionamiento.
Alimentación .....	8 pilas tipo C (no incluidas)
Peso.....	1.65kg aprox. (excluyendo pilas)
Dimensiones .....	230 (dia) x 340 mm